



60-1165.fm Page 1 Thursday, August 19, 1999 3:45 PM

 
 
 


Cat. No. 60-1165
OWNER'S MANUAL



Please read before using this equipment.

Electro Top



Your RadioShack Electro Top will spin on any firm surface — on its stand, inside its box, and even on your finger!

© 1997 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark
used by Tandy Corporation.

BATTERIES

The Electro Top is powered by two AA batteries (not supplied). We recommend alkaline batteries (RadioShack Cat. No. 23-552/557). Or, you can use rechargeable nickel-cadmium batteries (Cat. No. 23-125, not supplied), with a battery charger (Cat. No. 23-153, not supplied).

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

1. Use a Phillips screwdriver to remove the screws on the battery compartment cover, then lift the cover to remove it.

2. Install the batteries as indicated by the polarity symbols (+ and -) marked inside the compartment.

-
3. Replace the cover by inserting the tab into the groove. Then slide **OFF/ON** to **ON** and tighten the screws until the fly-wheel begins to turn.

If the top spins slowly, or does not move at all, replace the batteries.

Cautions:

 
 
- If you do not plan to use the top for several days, remove the batteries.
- Never leave dead or weak batteries in the top. Batteries can leak chemicals that can destroy electronic parts.
- Always dispose of old batteries promptly and properly.

Important: Your Electro Top is capable of using rechargeable nickel-cadmium batteries. At the end of the batteries' useful life, they must be recycled or disposed of properly. Contact your local, county, or state hazardous waste management authorities for information on recycling or disposal programs in your area. Some options that might be available are: municipal curbside collection, drop-off boxes at retailers such as you local RadioShack store, recycling collection centers, and mailback programs.





OPERATION

Slide **OFF/ON** to **ON** and allow the flywheel inside the top to speed up for about 15–30 seconds. Then place the spinning top in a vertical position on a firm surface.



10

  

To use the stand, place the circular base of the stand on a firm surface and put the top on the stand as shown. The top spins in place on the stand's tip.

 
 
 
 
To spin the top on the tip of your finger,
keep it in a vertical position.

Caution: Play with the top over a soft sur-
face such as a mattress or carpeting so it
will not break if you drop it.

You can also spin the top inside its box. Make sure the tip of the spinning top extends outside the hole in the lower corner of the box. Then place the box as shown. The top spins and the box stands on its corner.



When you finish playing with the top, slide
OFF/ON to OFF.




CARE

To enjoy your Electro Top for years:

- Keep the Electro Top dry. If it gets wet, wipe it dry immediately.
- Use and store the Electro Top only in normal temperature environments.
- Handle the Electro Top gently and carefully. Don't drop it.
- Keep the Electro Top away from dust and dirt.
- Wipe the Electro Top with a damp cloth to keep it looking new.

 Modifying or tampering with the Electro Top's internal components can cause a malfunction and invalidate its warranty. If your Electro Top is not performing as it should, take it to your local RadioShack store for assistance.

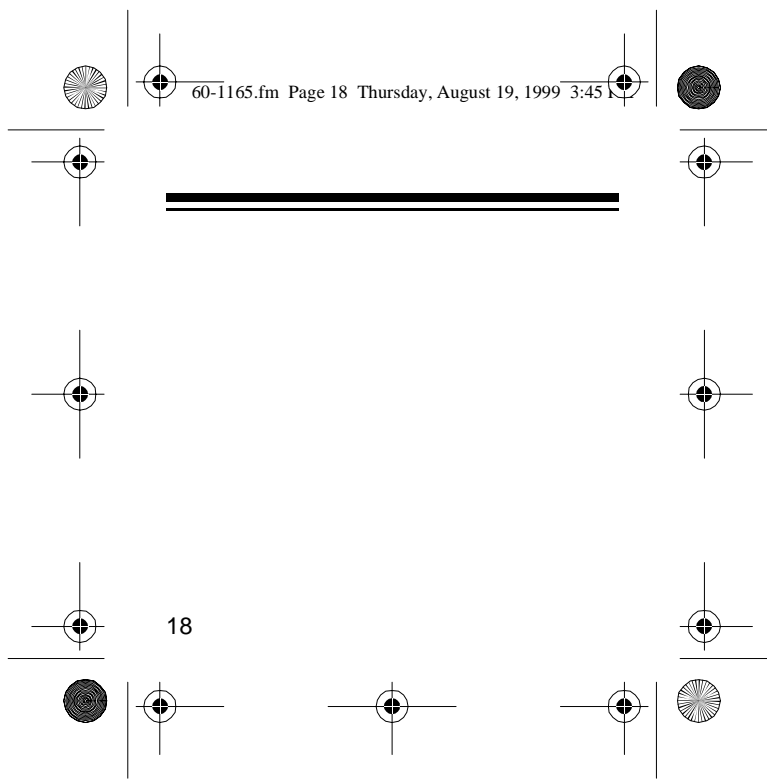

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. *(continued)*

(continued) In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or re-conditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

7A7

Printed in Hong Kong